


# Volvo P1800 1961 - 1963 Wiring Diagram - (Chassis # 0001 to # 6000)

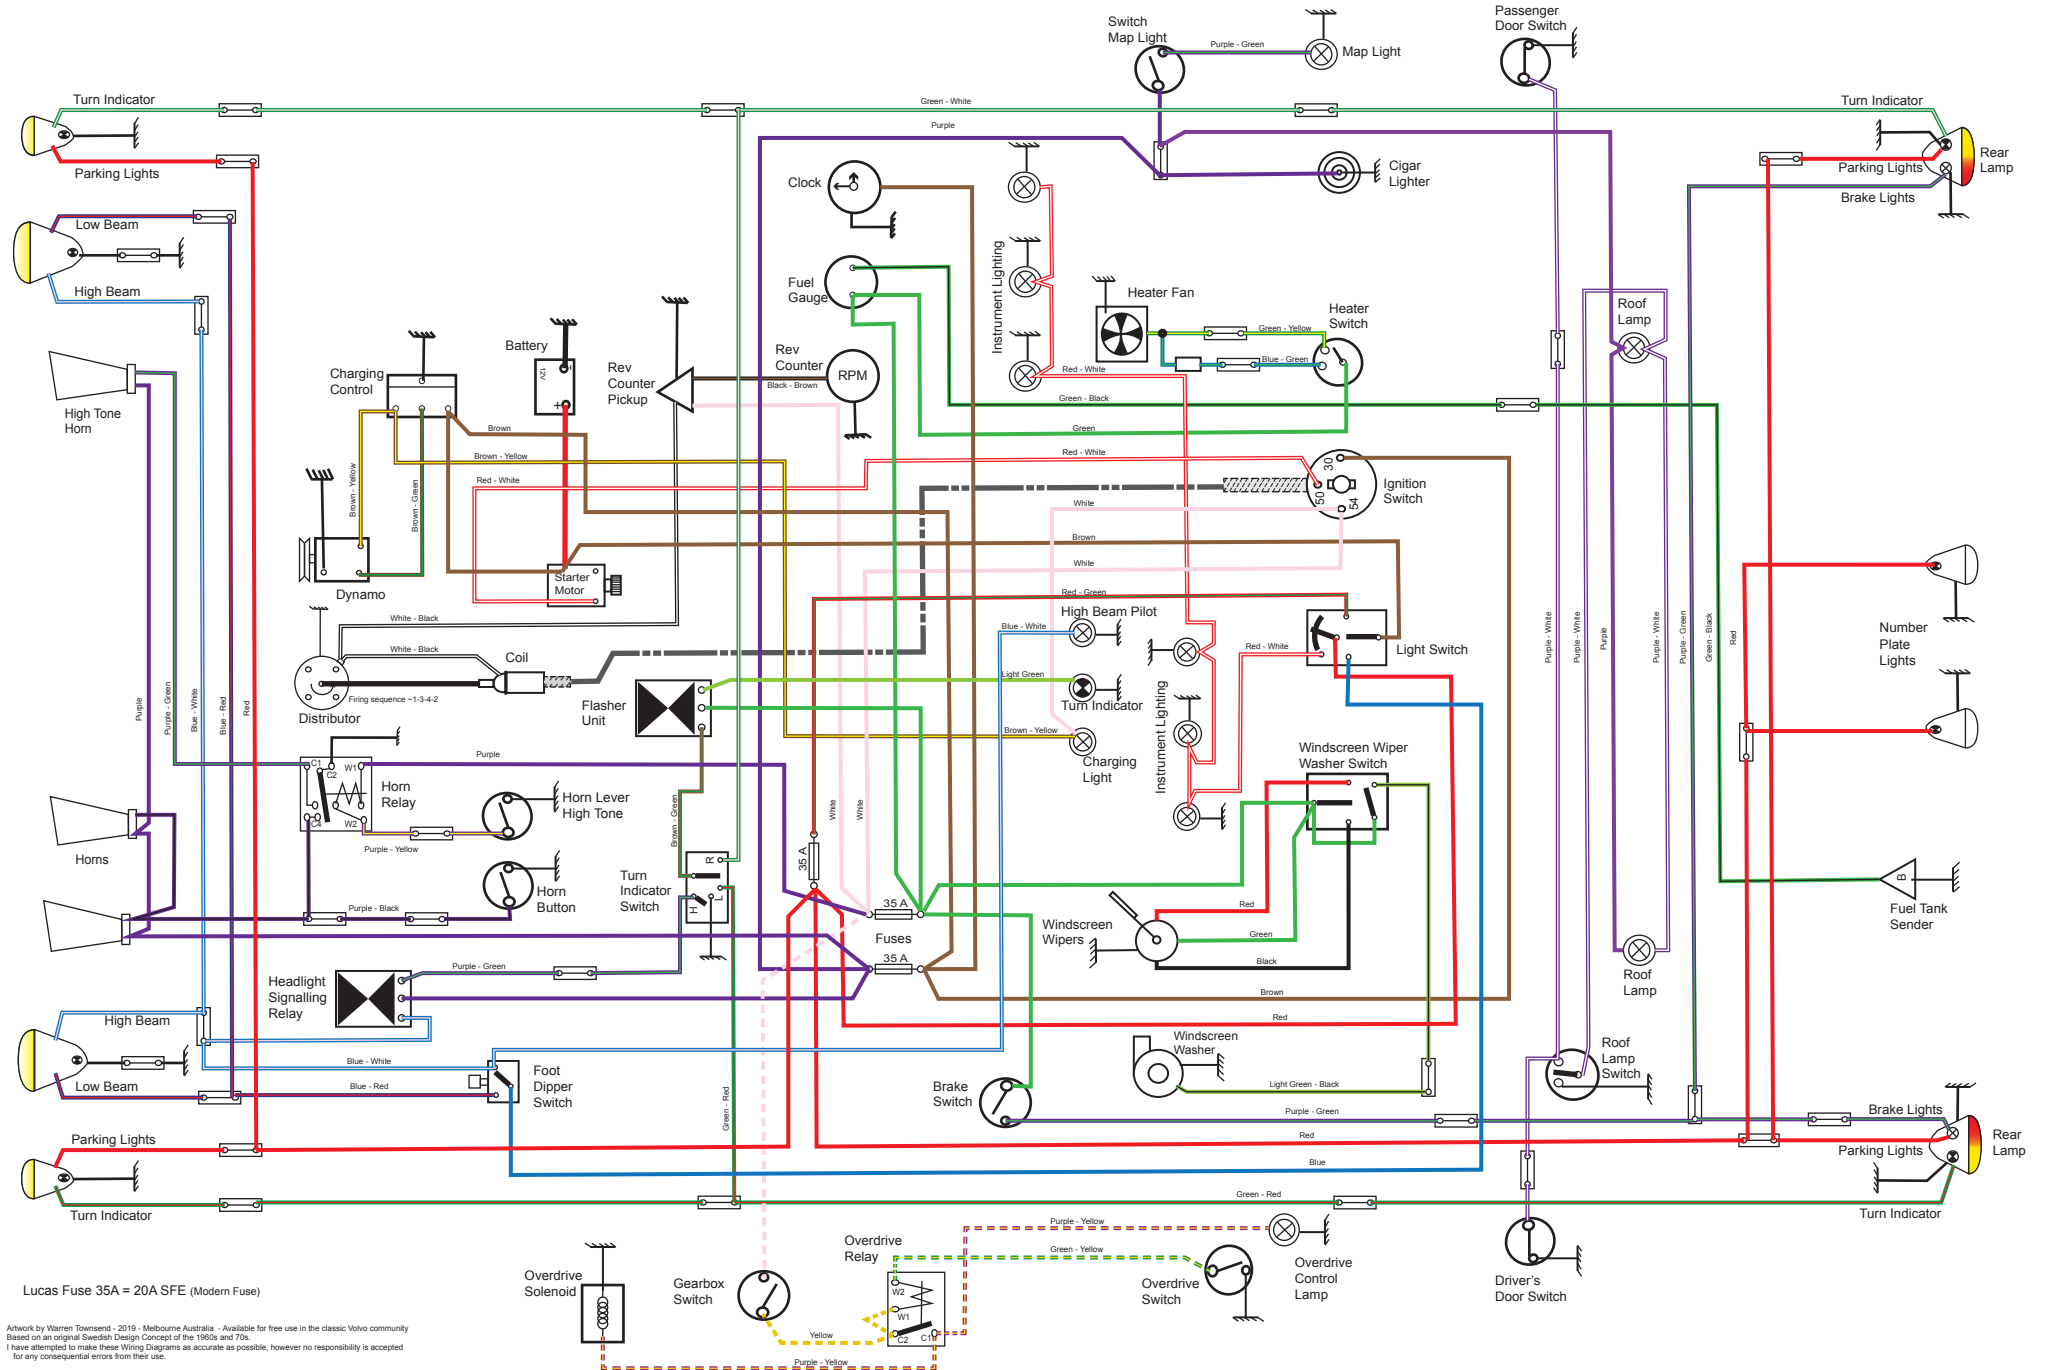

Artwork by Warren Townsend - 2019 - Melbourne Australia - Available for free use in the classic Volvo community based on an original Swedish Design Concept of the 1960s and 70s. I have attempted to make these Wiring Diagrams as accurate as possible, however no responsibility is accepted for any consequential errors from their use.